
Storage Bin Assembly Instructions

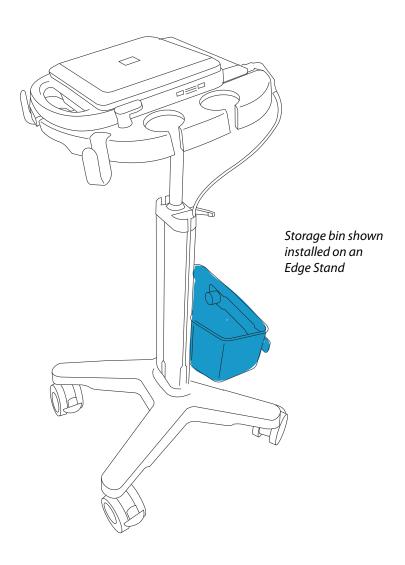




1

Unpacking the box

Storage bin (1)

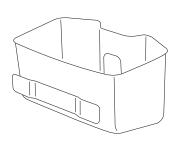

Bin holder (1)



Bracket (1)



Allen bit (1)



Accessory screws and washers (2)










Magnetic bit driver (1)



Preparing the stand

STEP 1

Press down the lever on two or more wheels.

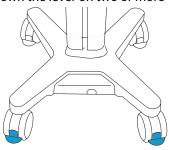


Attaching the storage bin


STEP 2

Insert the flat, rubber side of the bracket into the groove at the lower back of the column.




Insert the Allen bit into the bit driver.

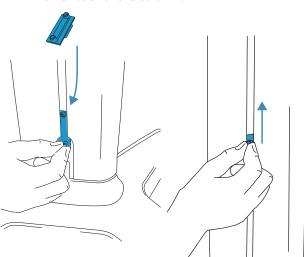

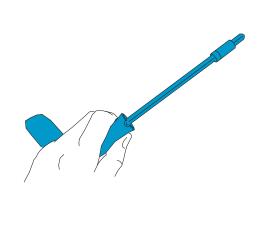


STEP 4

Align the holes on the bin holder with the holes on the bracket.

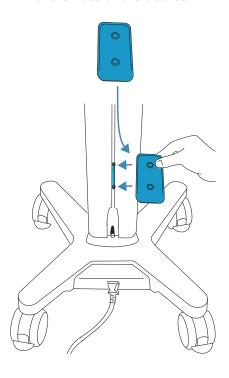


STEP 6

Attach the storage bin by sliding it down the bin holder.

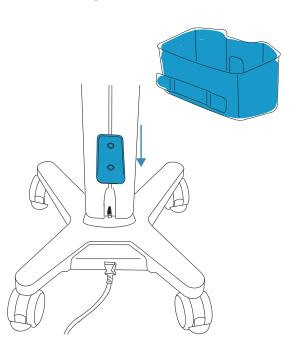


STEP 5

Use the bit driver and Allen bit to attach the bin holder to the bracket with the two accessory screws.

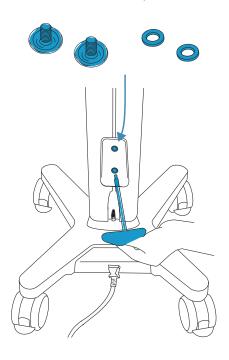

STEP 7


Wrap excess power cord around the cord wrap on the storage bin.

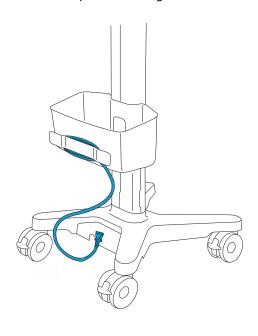

Removing the storage bin


STEP 7

Press the tab on the back of the bin, and pull straight up.

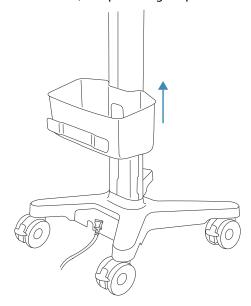

STEP 8

Remove the bin holder with a bit driver or Allen wrench.

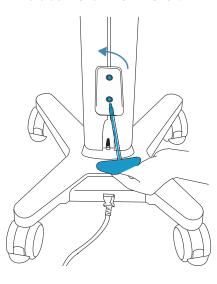

Caution:

F: 1-425-951-1201

Federal (United States) law restricts this device to sale by or on the order of a physician.

Edge, SonoSite SII, SonoSite, and the SonoSite logo are trademarks or registered trademarks of FUJIFILM SonoSite, Inc. in various jurisdictions. Value from Innovation is a trademark of FUJIFILM Holdings America Corporation.

All other trademarks are the property of their respective owners.

 $Copyright @ 2015 \ FUJIFILM \ SonoSite, Inc. \ All \ rights \ reserved.$

<u>Manufacturer</u>	EC Authorized Representative	<u>Australia Sponsor</u>	11/2015	
FUJIFILM SonoSite, Inc.	Emergo Europe	FUJIFILM SonoSite		(ϵ)
21919 30th Drive SE	Molenstraat 15	Australasia Pty Ltd		
Bothell, WA 98021 USA	2513 BH, The Hague	114 Old Pittwater Road		
T: 1-888-482-9449 or 1-425-	The Netherlands	BROOKVALE, NSW, 2100		
951-1200		Australia		

P21955-01

